


SECTION A-A
(JOINTS ALIGNED)

SECTION A-A
(JOINTS NON - ALIGNED)

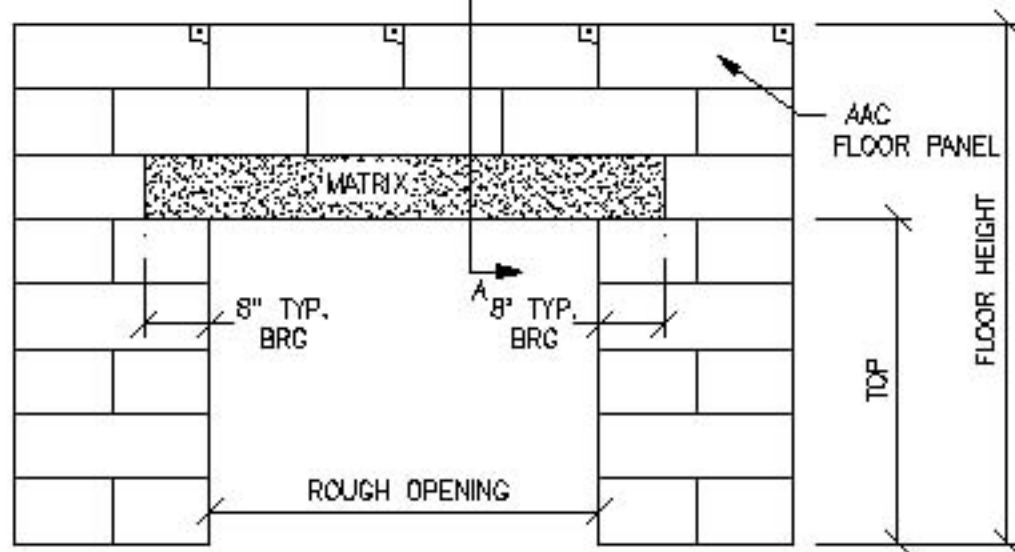

(REFER TO STANDARD PRECAST LINTELS SCHEDULE FOR OPENING SIZE AND LOAD)

LOAD BEARING WALL @ LINTEL